



NXS-H

Nexersys Home Model Install Overview

Install Overview

More detailed instructions can be found in the Assembly Manuals included with your product.

Attach video, audio, and power cables. See Step 8 on back page.

Monitor is installed vertically with Nexersys logo on top.

Insert SD Card into CPU behind monitor.

Head pads are installed with rounded edge closest to monitor.

Attach accelerometer cables to CPU. See Step 7 on back page.

Ensure "X" orientation is correct on all pads.

Turn on both CPU and monitor.

Loosen both knobs to adjust height.

Body pad is installed with rounded edge facing down.

Kick Pads are installed with rounded edge facing in.

Attach accelerometer cables to each pad. See Steps 4 & 5 on back page.

Level Nexersys by rotating adjustable feet.

Ensure Gasket is installed properly under spine. See Step 2 on back page.

Ensure Gasket and Bracket are installed properly under spine support. See Step 1 on back page.

Navigate through the Nexersys User Interface with pads 1-5.

Pad 1 (left head) – back, Pad 2 (right head) – exit, Pad 3 (left body / dig) – scroll left, Pad 4 (center body) – enter, Pad 5 (right body / dig) – scroll right

Corporate Offices


500 San Marcos Street
Suite 201
Austin, TX 78702

www.nexersys.com
support@nexersys.com
(877) 785-3823


nexersys™

HARD BODY.
SHARP MIND.™


Step 1: Spine Support Assembly and Base Assembly

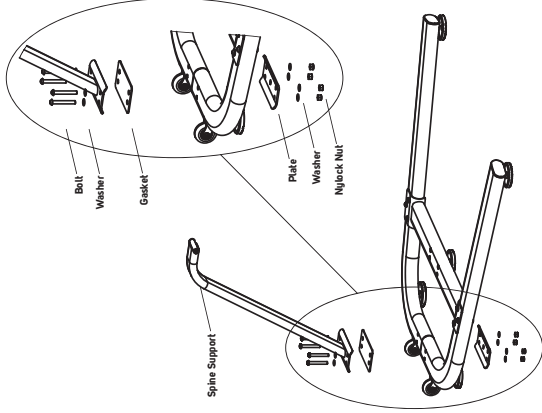

Step 2: Spine Support Assembly

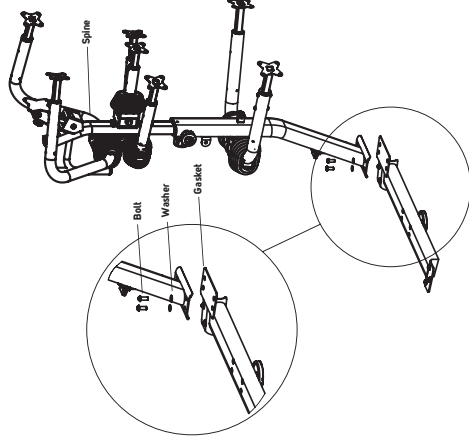


Step 3: Spine Assembly

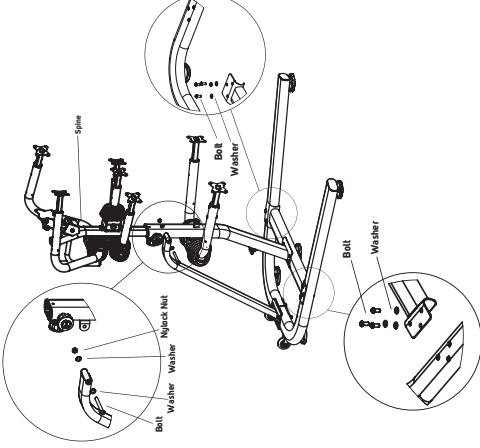


Step 4: Pad Attachment Overview

Accelerometer cables must be connected to each pad before installation.

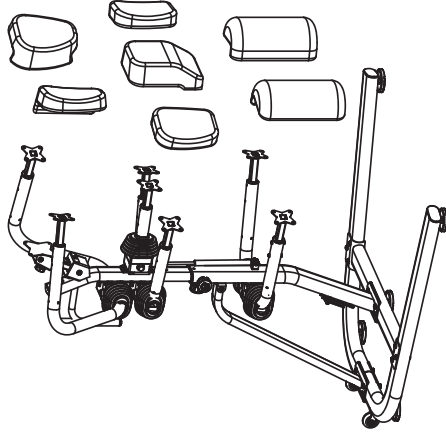


Step 5: Accelerometer

When attaching the accelerometer cable to the accelerometer board, make sure the cable is oriented properly and the clip latches securely.

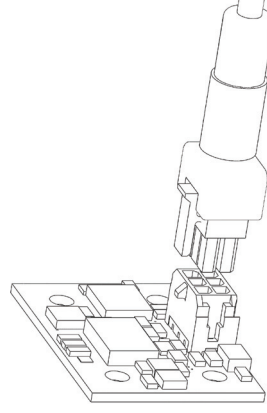


Step 6: Mount CPU and Monitor to Nexersys

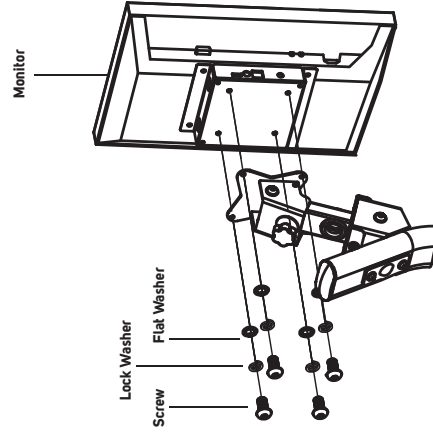

Warning: Be sure to install washers per instructions to avoid potential damage to CPU.

Step 7: Connect Accelerometer Cables

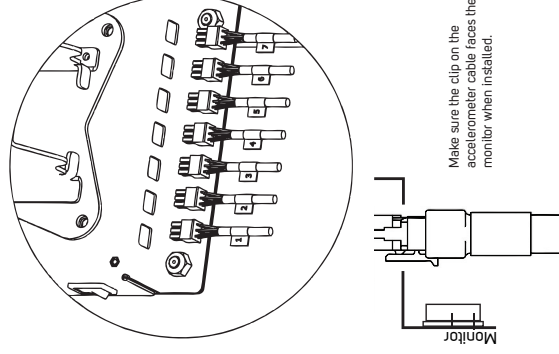

Make sure the clip on the accelerometer cable faces the monitor when installed.

Step 8: Connect Audio and Video Cables

